





# JEEP COMPASS / PATRIOT / RENEGADE


## Convenience Net

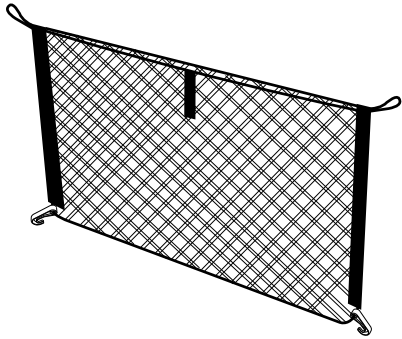


**A**

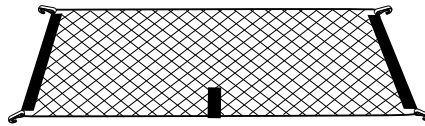

**B**

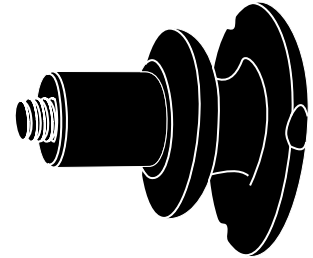


**C**

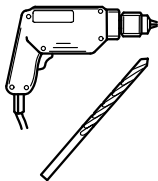

1/4" & 1/2"


### Jeep Compass / Patriot / Renegade Floor Net

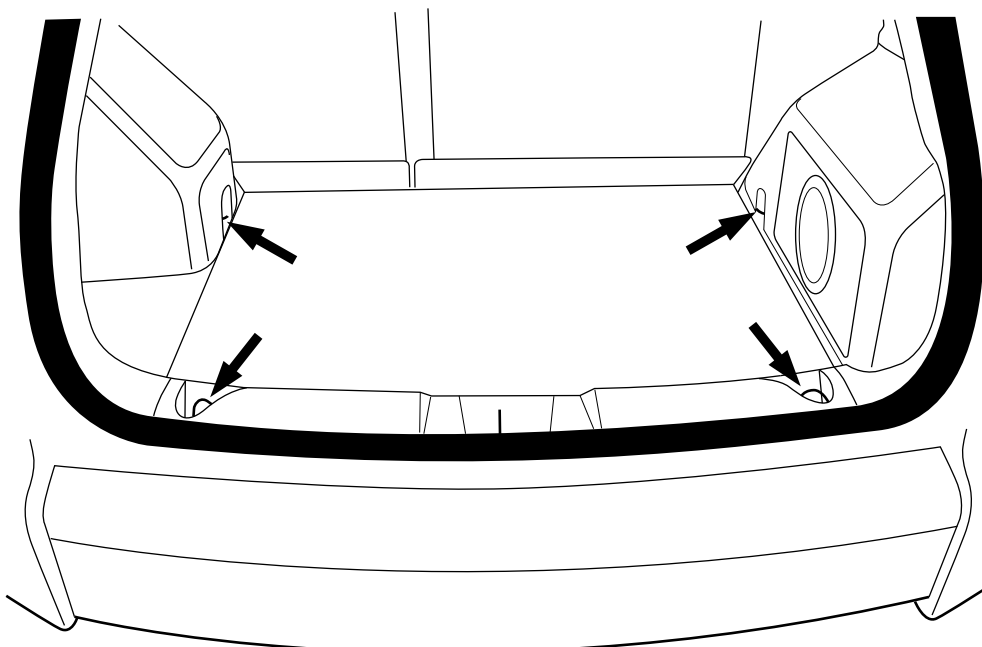


**1**

# Jeep Compass / Patriot / Renegade Floor Net


2

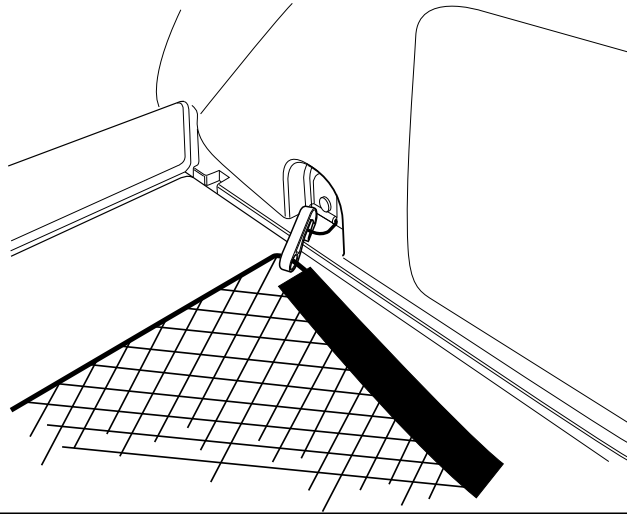

3

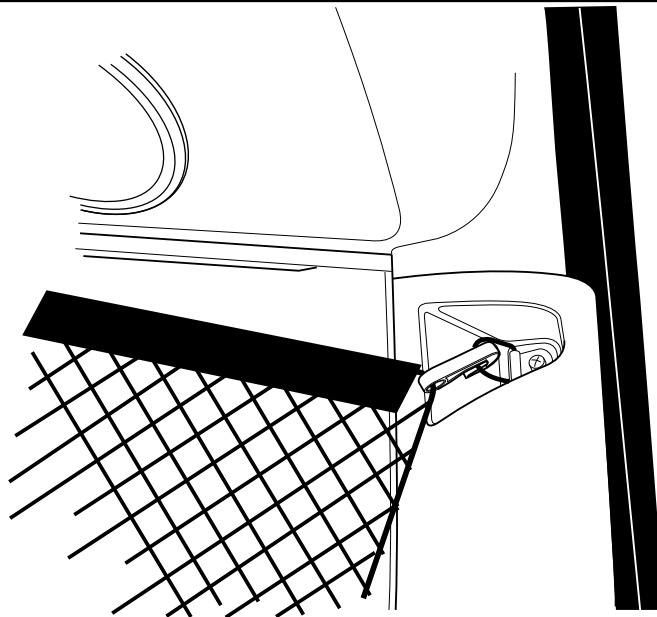


4

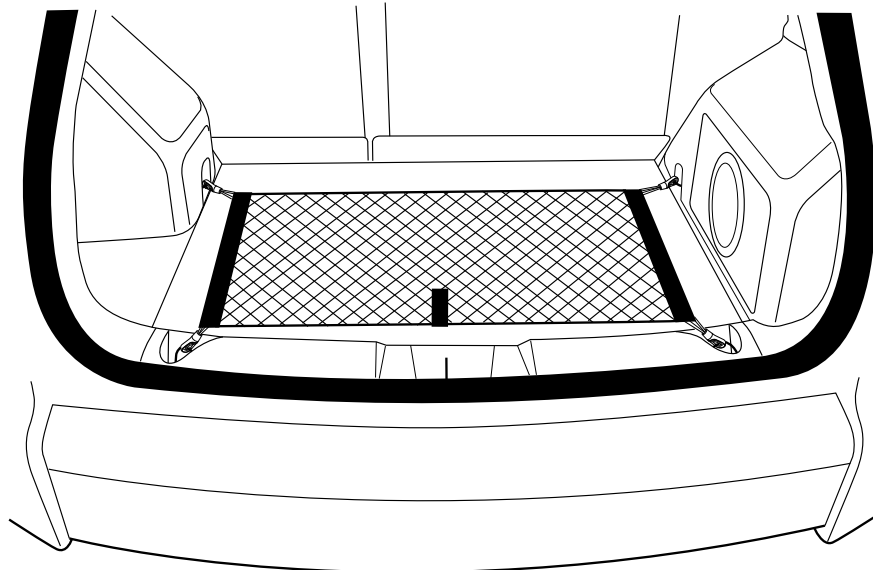


## Jeep Compass / Patriot Vertical Envelope Net


- Mark drilling location on trim panel
- Drill 1/4" pilot hole
- Enlarge hole with 1/2" drill bit

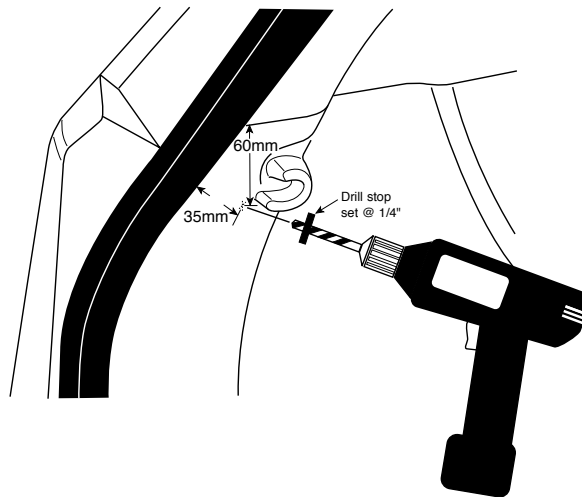

5

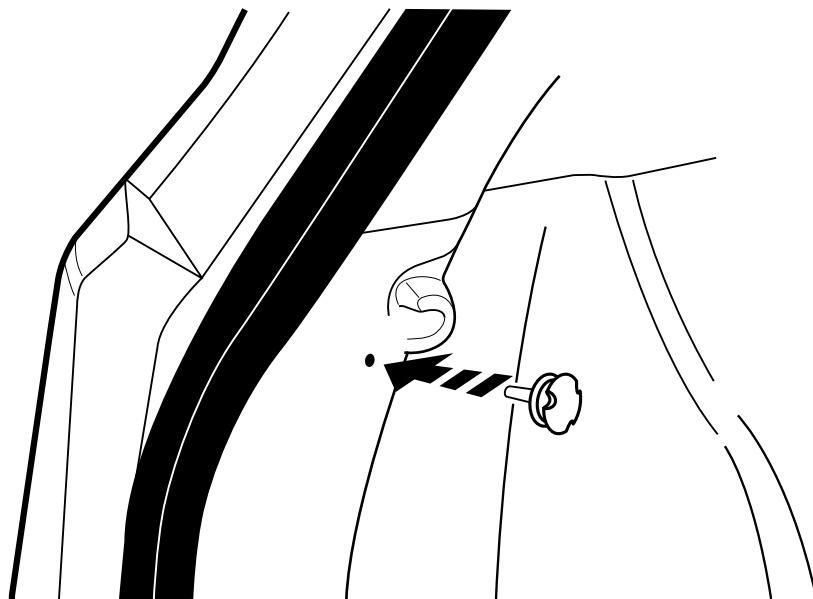


6

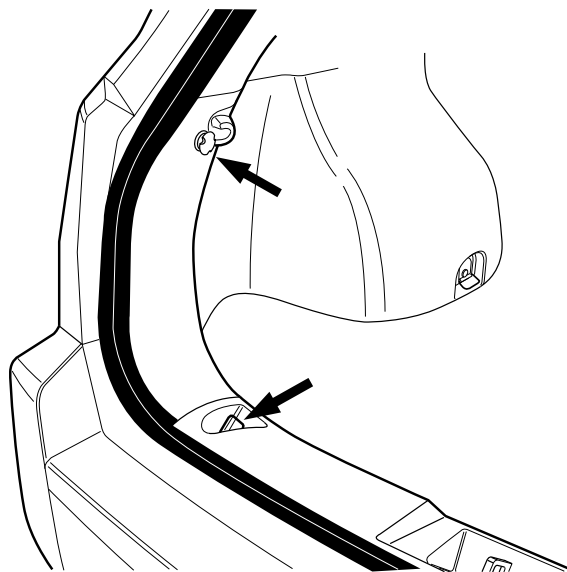



7

# Jeep Compass / Patriot Vertical Envelope Net




8

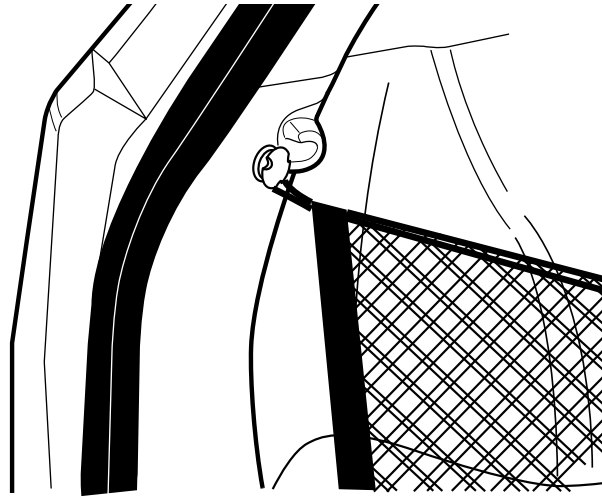



9

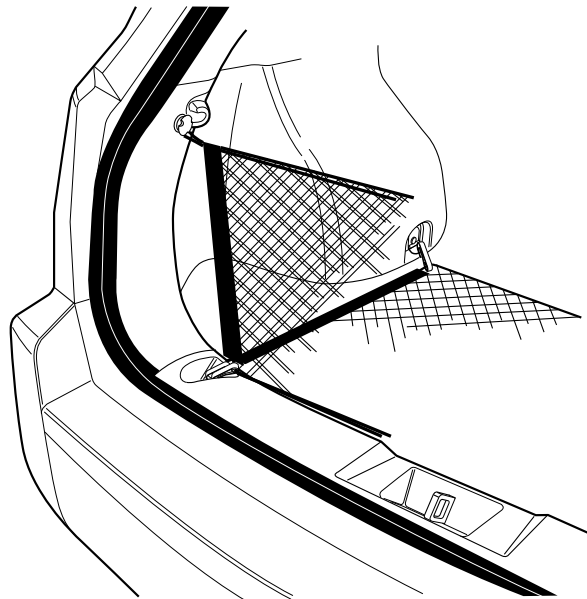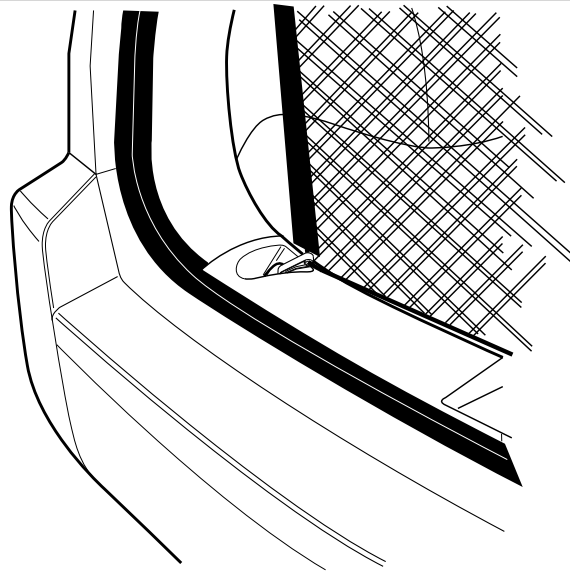

# Jeep Renegade Vertical Envelope Net

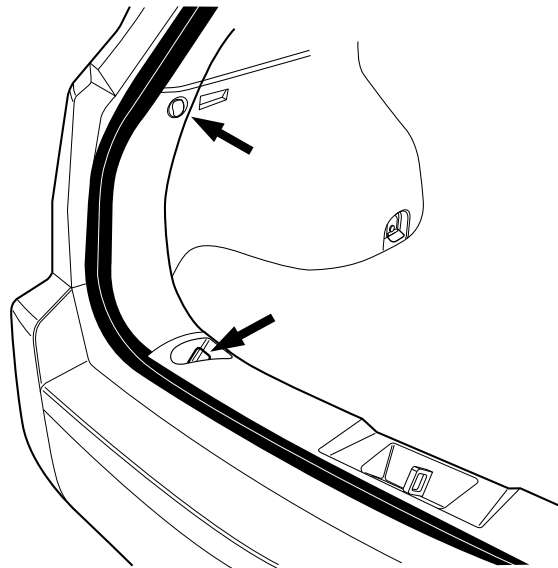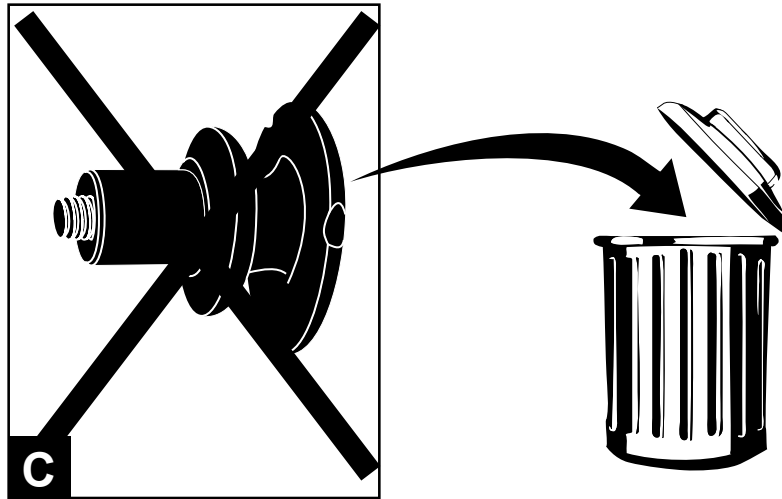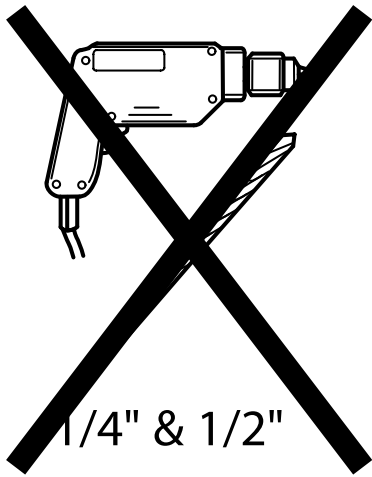

8

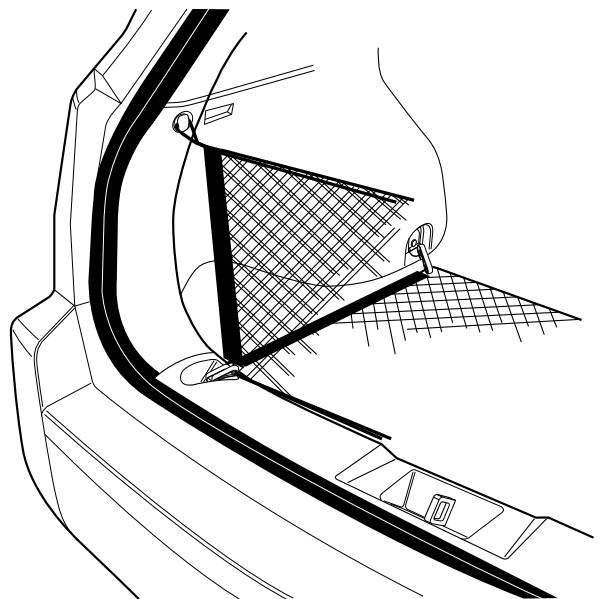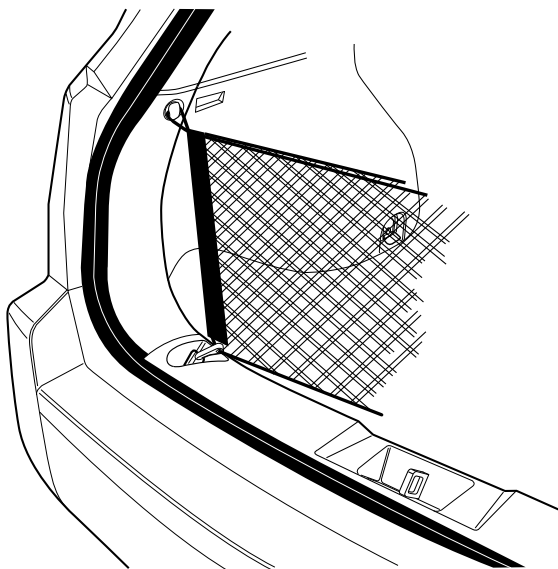

9